



## Actuator LA18 IC Advanced User manual

# Contents

<b>Preface</b> .....	3
<b>Valid for</b> .....	4
<b>Important information</b> .....	5
Safety instructions.....	5
Safety issues .....	6
Before installation, re-installation or troubleshooting .....	7
Before start-up .....	7
During operation.....	7
Misc. ....	7
<b>Only for EU markets</b> .....	8
<b>Only for Non EU markets</b> .....	8
<b>Misuse</b> .....	8
<b>Repairs</b> .....	9
<b>Manufacturer's declaration</b> .....	9
<b>Misc. on the HOMELINE® system</b> .....	10
Warranty.....	10
Maintenance.....	10
<b>ETL-marking</b> .....	11
<b>System overviews</b> .....	12
<b>Bluetooth® communication</b> .....	13
<b>How to mount the locking device</b> .....	14
<b>Disposal of LINAK's products</b> .....	15
<b>Main groups of disposal</b> .....	15
<b>Disposal of batteries</b> .....	15
<b>Labels</b> .....	16
<b>Drawings</b> .....	17
<b>Addresses</b> .....	24

# Preface

Dear User,

We are delighted that you have chosen a product from LINAK®.

LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls and chargers.

This User Manual does not address the end-user. It is intended as a source of information for the manufacturer of the equipment or system only, and it will tell you how to install, use and maintain your LINAK electronics. It is the responsibility of the manufacturer of the end-use product to provide a User Manual where relevant safety information from this manual is passed on to the end-user.

We are sure that your LINAK product/system will give you many years of problem-free operation.

Before our products leave the factory they undergo full function and quality testing. Should you nevertheless experience problems with your LINAK product/system, you are always welcome to contact your local dealer. LINAK subsidiaries and some distributors situated all over the world have authorised service centres, which are always ready to help you.

LINAK provides a limited warranty on its products. This warranty is, however, subject to correct use in accordance with the specifications, maintenance being done correctly, and any repairs being carried out at a service centre, which is authorised to repair LINAK products. You can review the full terms of the LINAK warranty on the LINAK website [www.linak.com/warranty](http://www.linak.com/warranty).

Changes in installation and use of LINAK products/systems can affect their operation and durability. The products are not to be opened by unauthorised personnel.

The User Manual has been written based on our present technical knowledge. We are constantly working on updating the information and we therefore reserve the right to carry out technical modifications.

**LINAK A/S**

## Valid for:

This User Manual is valid for the following products:

(See the first 3 - 5 characters on the label)

Actuators:	LA18 IC Advanced Master and a LA18 IC Advanced Follower
Power supply:	SMPS001, SMPS002 or SMPS006
Controls:	HC20 Wireless, HC30 Wireless or HC40 Advanced
Accessories:	LEDLIGHTRAIL001, LEDLIGHTRAIL002, and massage motors MD1000D7 and MD1000D8



## Important information

Important information on LINAK® products can be found under the following headings:



### Warning!

Failure to comply with these instructions may result in accidents involving serious personal injury.



Failing to follow these instructions can result in the product being damaged or being destroyed.

---

## Safety instruction



### General

Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.



It is important for everyone who is to connect, install, or use the systems to have the necessary information and access to this User Manual. Follow the instructions for mounting – risk of injury if these instructions are not followed.



The appliance is not intended for use by young children or infirm persons without supervision.



If there is visible damage on the product it must not be installed.



Note that during construction of applications, in which the actuator is to be fitted, there must be no possibility of personal injury, for example the squeezing of fingers or arms.



Only the power supply type SMPS001, SMPS002 or SMPS006, shall be used with the system.

The power supply shall not be covered while operating to allow sufficient cooling of this appliance.



Assure free space for movement of application in both directions to avoid blockade.



The appliance is only to be used with the power supply unit provided with the appliance.

---

## Safety issues



The builder of the equipment shall ensure that the use of the component complies with relevant standards – like the Machine Directive. Care must be taken to avoid squeezing of cables as it can cause movement of the system!



The SMPS001/002/006 must not be packed in heat insulating material, but must be placed so that it can emit waste heat to the surroundings. There are no ventilation holes to consider, the SMPS emits heat through its surface.



Only the power supply type SMPS001, SMPS002 or SMPS006, shall be used with the system.

## **Before installation, re-installation, or troubleshooting**

- Stop the actuators
- Pull out the mains plug.
- Relieve the actuators of any loads, which may be released during the work.

## **Before start-up**

- Make sure that the system has been installed as instructed in this User Manual.
- Make sure that the voltage of the actuator system/SMPS is correct before the system is connected to the mains.
- System connection. The individual parts must be connected before the actuator system/SMPS is connected to the mains. See the User Manual for LINAK actuators, if necessary.

## **During operation**

- If the actuator system makes unusual noise or smells, switch off the mains voltage immediately.
- Take care that the cables are not damaged.
- The products must only be used in an environment, that corresponds to their IP protection.

## **Misc.**

Updated manuals and declarations can always be found here:  
[www.linak.com/homeline](http://www.linak.com/homeline)

### **Only for EU markets**



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

### **Only for Non EU markets**



Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical, sensory or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.



Moreover, children must be under surveillance to ensure that they do not play with the product.

### **Misuse**



Do not overload the actuators – this can cause danger of personal injury and damage to the system.



When the actuator is in fully retracted position, the load on the actuator must not exceed specified max. self-lock.



Do not use the system in environments other than the intended indoor use

# Repairs

Repairs In order to avoid the risk of malfunction, all HOMELINE® repairs must only be carried out by authorised LINAK service centres or repairers, as special tools must be used and special gaskets must be fitted. Products under warranty must also be returned to authorised LINAK service centres.

Further information on LINAK HOMELINE warranty can be found on the LINAK website [www.linak.com/warranty](http://www.linak.com/warranty).



**Warning!**

If any of the HOMELINE® products are opened, there will be a risk of subsequent malfunction.



**Warning!**

The HOMELINE® systems are not resistant to cutting oil.

---

## Manufacturer’s declaration

**DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY  
2006/42/EC ANNEX II B**

**LINAK A/S**  
Smedevænget 8  
DK - 6430 Nordborg

Herewith declares that LINAK HOMELINE® products as characterized by the following models and types:

Control Boxes	CB9H, CBH Advanced, CBH Basic
Linear Actuators	LA27, LA29, LA31 HOMELINE
Dual Actuators	TD3, TD4, TD5
Controls	HB10 RF, HB20RF, HB60, HC10, HC10RF, HC20RF, HC40
Accessories	Bluetooth Adapter, DC CONNECTOR, LED Lightbox, Lightplug001, Massage Motor, SMPS001, SMPS001, SMPS002, SMPS006

comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, *Essential health and safety requirements relating to the design and construction of machinery*:

1.5.1 Electricity supply

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

**This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.**

Nordborg, 2019-10-21

**LINAK A/S**  
John Kling, B.Sc.E.E.  
Regulatory Affairs Manager  
Authorized to compile the relevant technical documentation

Original Declaration

The RoHS mark is only applicable for the end product. Therefore, it must be obtained by the manufacturer of the end products. LINAK® can, however, supply the required material information on our products.

For more information, visit: <https://www.linak.com/about/declarations/>

or contact: [chemicalcompliance@linak.com](mailto:chemicalcompliance@linak.com)

## Declaration of conformity

### DECLARATION OF CONFORMITY

LINAK A/S  
Smedevænget 8  
DK - 6430 Nordborg


Herewith declares that LINAK DESKLINE® products as characterized by the following models and types:

**LA18: 18040aaa0C0b0B10-deA11fffggh00**

(Where - aaa can be between 36 and 300; b can be 0 or K; - d can be 1 or 6; e can be 1 or 2; fff can be between 218 and 370; gg can be A1, A2, A3, B1, B3, B5, S2 or S4; h can be 0, C or X)

Complies with RED Directive: 2014/53/EU according to following standards:  
EN 62479:2010, EN 62368-1:2014/A11:2017, ETSI EN 301 489-1 V2.2.3 (2019-11), Draft ETSI EN 301 489-17 V3.2.2 (2019-12) and ETSI EN 300 328 V2.2.2 (2019-07)

Complies with RoHS2 Directive 2011/65/EU according to the standard:  
EN 50581:2012

Nordborg, 2020.02-24  
  
LINAK A/S  
Dragan Macura,  
Regulatory Compliance Manager  
Deskline and Homeline Segments  
Authorized to compile the relevant technical documentation

Original Declaration

Use the LA18 in an environment with temperature between -10 to +40 °C. Otherwise, the LA18 may be damaged. It can be operated at altitudes up to 2000 m.

Hereby, LINAK A/S declares that the radio equipment type LA18 is compliant with Directive 2014/53/EU.



Operating Frequency Range	The maximum RF Output Power
Bluetooth 2402 - 2480 MHz	7.59 dBm EIRP

## Misc. on the HOMELINE® system

### Warranty

This HOMELINE product is subject to warranty pursuant to the terms of LINAK HOMELINE Warranty Paper, available on the LINAK website [www.linak.com/warranty](http://www.linak.com/warranty)

### Maintenance

Clean dust and dirt on the outside of the system at appropriate intervals and inspect for damage and breaks. Inspect the connections, cables, and plugs and check for correct functioning as well as fixing points.



**The cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).**

# ETL-marking

Due to space limitations, the complete ETL-marking demands are not represented on the marking plates.  
The full ETL Recognized Component markings are shown here.



C/N 120690  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 9901916  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4008003  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4008005  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4008671  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States

 


C/N 4009507  
Conforms to UL962  
Cert. to CSA Std. No. 68-09  
ETL Recognized Component mark for Canada and United States



# System overviews

The LA18 IC Advanced system consists of an LA18 IC Advanced Master and an LA18 IC Advanced Follower. The system is connected to the mains via an SMPS001/002/006 and controlled by a Bluetooth® hand control (HC20 Wireless, HC30 Wireless or HC40 Advanced).

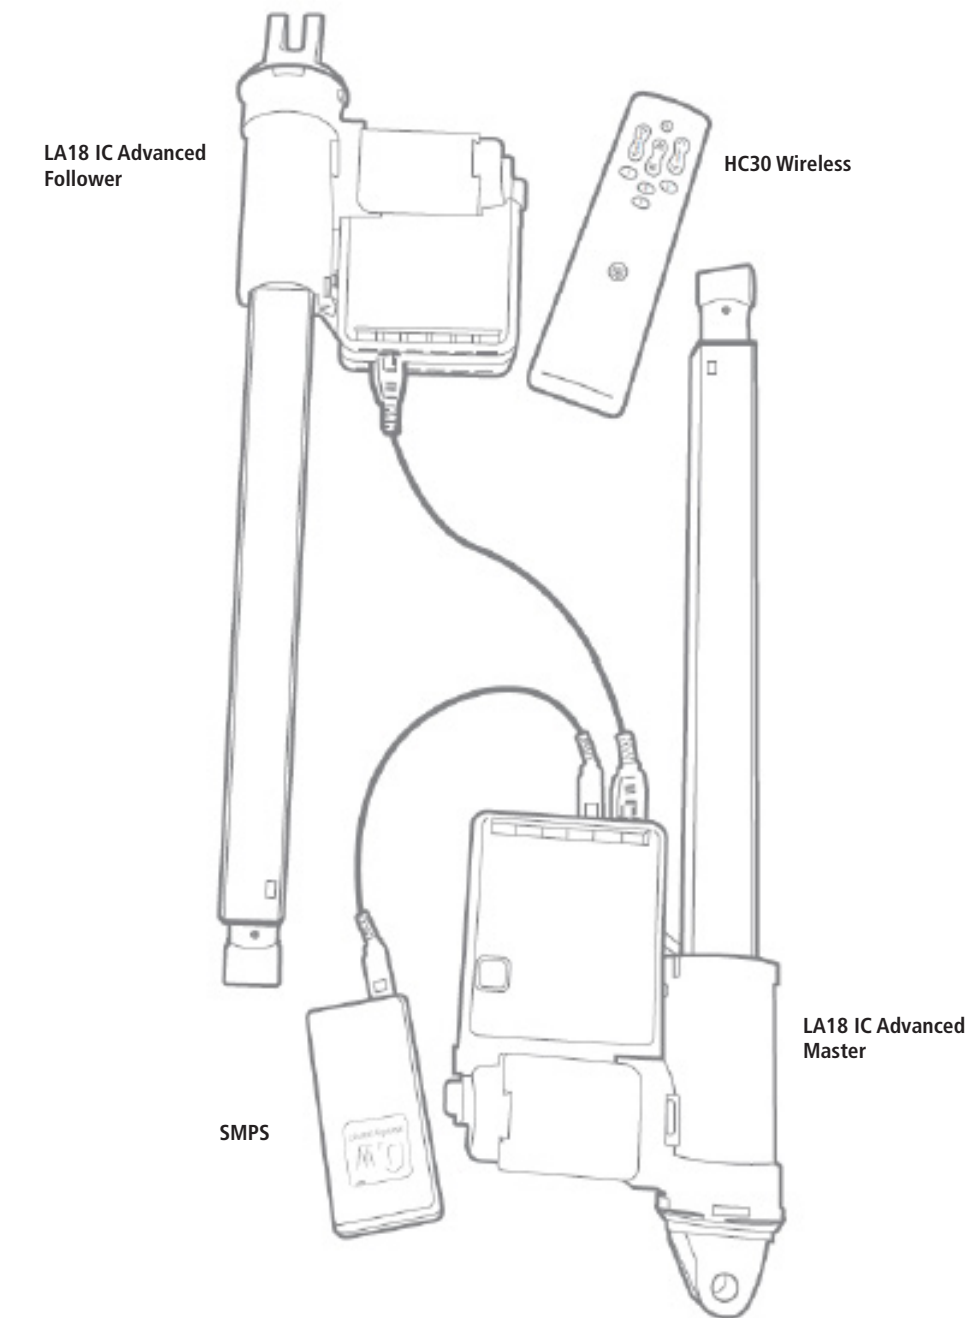

## How to pair

The system features Bluetooth® Low Energy technology, which makes it capable of being controlled via the wireless LINAK® hand controls. Furthermore, it makes it possible to control the bed via the Bed Control App. However, it can only receive commands from one device at a time, so the user must wait 5 seconds without pushing a button before it is possible to use another control/mobile device.

## Pairing

1. Connect the system to the mains via the connection cable.
2. The LA18 is in pairing mode for 3 minutes and the Under Bed Light flashes to indicate this.  
Press the two top buttons on the hand control at the same time.



Now the light gives a long flash to indicate that the control and the LA18 are paired up. The LA18 stays in pairing mode and it is possible to connect more controls using the same procedure as above.

### Note:

Wait 5 seconds after pairing control 1 before you can pair control 2. To get the system out of pairing mode – simply press any button on an already paired control.

## Dual pairing

Pairing one hand control to two LA18 requires a hand control that supports dual pairing.

1. Connect the two LA18 to the mains at the same time.
  2. The Under Bed Light starts to flash to indicate pairing mode has started.
  3. Take the hand control and press the two upper buttons and both products are paired to the hand control.
- Now the light gives a long flash to indicate that the control and both the LA18 systems are paired up.

### How to unpair one system

1. Put the LA18 system you want to keep paired into pairing mode and pair the hand control.
2. Send a command from the hand control and the pairing mode stops.
3. The connection between the other LA18 system and the hand control is now deleted.

## Initialisation

At first time connection of the actuator, the system must be initialised. Push the “down” button on the hand control for the actuator that must be initialised. Drive the actuator to its inner position and release the button on the hand control. Now press and hold the “down” button for 10 seconds to make the LA18 initiate – the actuator can now drive outwards. If more than one actuator is connected, the same has to be done with the other channels by pressing the matching “down” button on the hand control. The system is now ready for use.

 
## How to mount the locking device (0705889)

To ensure optimal cable relief on the SMP5001/002 a locking device (0705889) should be used. Follow the guide below on how to fix the locking device on the SMPS.


1. Take the SMPS




2. Plug the 2-poled DC cable in the SMPS

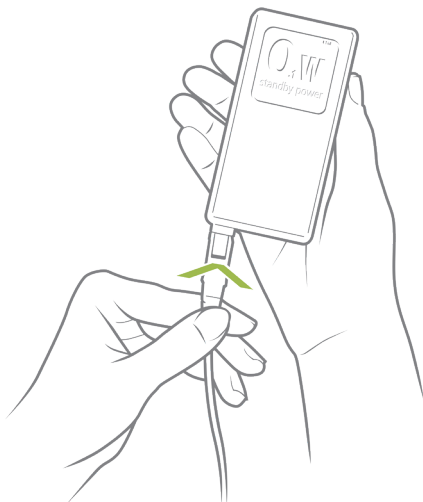

 3. Slide the locking device on

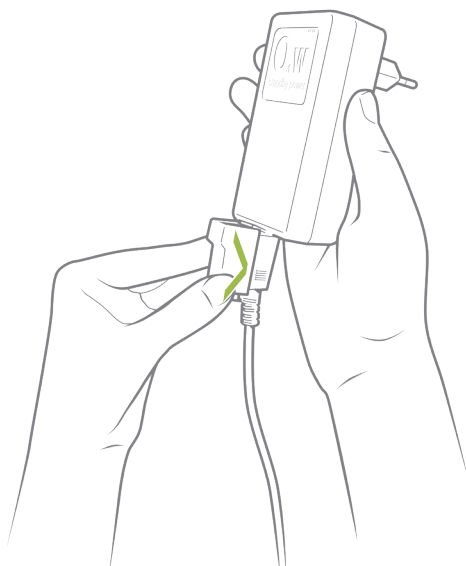

 4. The cable is now fully secured.

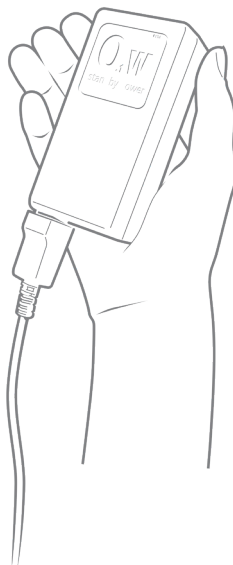

# Disposal of LINAK products

As LINAK customers often ask us how our products can be disposed of or scrapped, we have prepared this guidance that enables a classification to different waste fractions for recycling or combustion.

## Guidance

We recommend our products be disassembled as much as possible and divided into different waste groups for recycling or combustion.

For example, waste can be sorted into metals, plastics, cable scrap, combustible material and recoverable resources. Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Column/ Actuator :	Spindle and motor Plastic housing Cable PC boards	Metal scrap Plastic recycling or combustion Cable scrap or combustion Electronics scrap
Control Box :	PC boards Plastic housing Cable Transformer	Electronics scrap Plastic recycling or combustion Cable scrap or combustion Metal scrap
Handset/Control :	Plastic housing Cable PC boards	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now, almost all our casted plastic parts are supplied with an interior code for plastic types and fibre contents, if any.

## Main groups of disposal

Product main groups	Metal scrap	Cable scrap	Electronics scrap	Plastic recycling or combustion	Comments
LA18 IC Advanced Master	X	X	X	X	
LA18 IC Advanced Follower	X	X	X	X	
SMPS001 / 002 / 006			X	X	
Hand controls		X	X	X	
LED Light Rail		X	X	X	

## Disposal of batteries

Details regarding safe disposal of used and leaking batteries:  
Batteries should be disposed in accordance with appropriate federal, state and local regulations. LINAK recommends that used or leaking batteries are disposed through local recycling system. Please do not throw used or leaking batteries in normal household waste or in nature. This will cause damage to the enviroment.

### How to deal with leaking batteries

Leaking batteries should be disposed as described above.  
If leaking batteries are discovered in the product, the batteries must be removed at once to minimise damage to the product. If leaking batteries are left in the product, it become defective.

It is recommended to use plastic gloves when handling leaking batteries. The contents of a leaking batteries can cause chemical burns and respiratory irritation.

If exposed to the contents of a leaking battery, please wash with soap and water. If irritation persists, please seek medical attention. In case of eye contact, please flush eyes thoroughly with water for 15 minutes and seek medical attention.

Labels

Label for LA18 IC Advanced Master

**LINAK®**

Designed in Denmark

DK - 6430 Nordborg

Item Name : 180401520C0K0B10-61A11483A1C00

Item No. : 180003-00

Model Type : LA18A

Prod. Date : 07/02/2020

Max Load : Push 6000 N

Power Range : 18V~29V=, Max. 6.0 A

Duty Cycle : 10 %, Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O# 123456-0001 ASSEMBLED IN USA

Label for LA18 IC Advanced Follower

**LINAK®**

Designed in Denmark

DK - 6430 Nordborg

Item Name : 180400920C0K0B10-61A11483B3000

Item No. : 180004-00

Model Type : LA18A

Prod. Date : 07/02/2020

Max Load : Push 6000 N

Power Range : 18V~29V=, Max. 6.0 A

Duty Cycle : 10 %, Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O# 123456-0001 ASSEMBLED IN USA

Label for SMP5001

**LINAK®**

DK- 6430 Nordborg

Type : Power Supply

Item No. : SMP5001

Model No. : ASW0539-24020002A

Input : 230-240V-50Hz Max1.8A

Output : 24.0V= 2.0A (continuous)

or : Max.Pout= 150W(Duty cycle:10%,2min on/18min off)

Serial No. : PO.XXXXXX CY190521

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O# 123456-0001 ASSEMBLED IN USA

Label for SMP5002

**LINAK®**

DK- 6430 Nordborg

Type : Power Supply

Item No. : SMP5002

Model No. : ASW0551-24020002A

Input : 120V-60Hz Max2.9A

Output : 24V= 2A(Continuous)

Output : 21V= 6A (Duty cycle:10%,2min on,18min off)

Serial No. : PO.XXXXXX CY190517

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O# 123456-0001 ASSEMBLED IN USA

Label for SMP5006

**LINAK®**

DK- 6430 Nordborg

Type : Power Supply

Item No. : SMP5006

Model No. : ASW0552-24020002B

Input : 100-240V-50/60Hz Max 2.8A

Output : 5.0V= 2.0A(Continuous)

Input : 110V-60/60Hz Max 2.9A

Output : 27V= 6A(Duty cycle:10%,2min on,18min off)

Input : 230V-60/60Hz Max 2.9A

Output : 27V= 6A(Duty cycle:10%,2min on,18min off)

Serial No. : PO.XXXXXX CY190111

CAUTION

• Risk of electric shock

• For indoor use only

• Do not open the unit

• Dry location use only

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O# 123456-0001 ASSEMBLED IN USA

Label for LED Light Rail

**LINAK®**

Designed in Denmark

DK- 6430 Nordborg

Item : LEDLightRail001

ASSEMBLED IN CHINA

P.O. 843128-00182

 
Label for HC20 Wireless



Label for HC30 Wireless



Label for HC40 FRAME Advanced

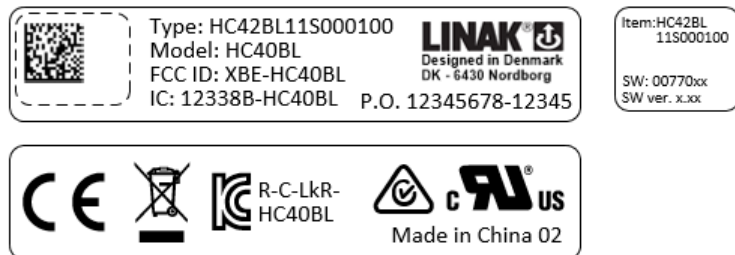


Label for HC40 TWIST Advanced




**DRAWING APPENDIX**

 
LA18 IC Advanced Master

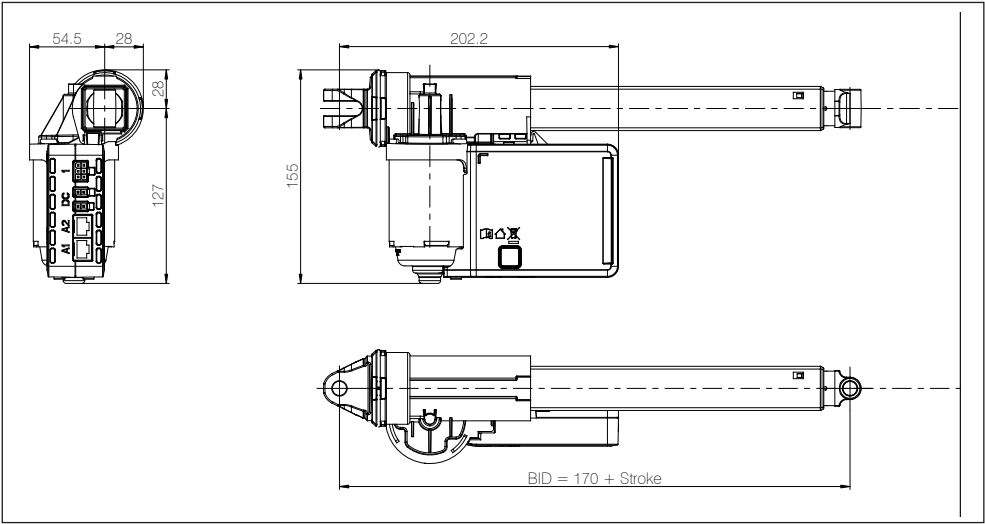


LA18 IC Advanced Follower (B5)

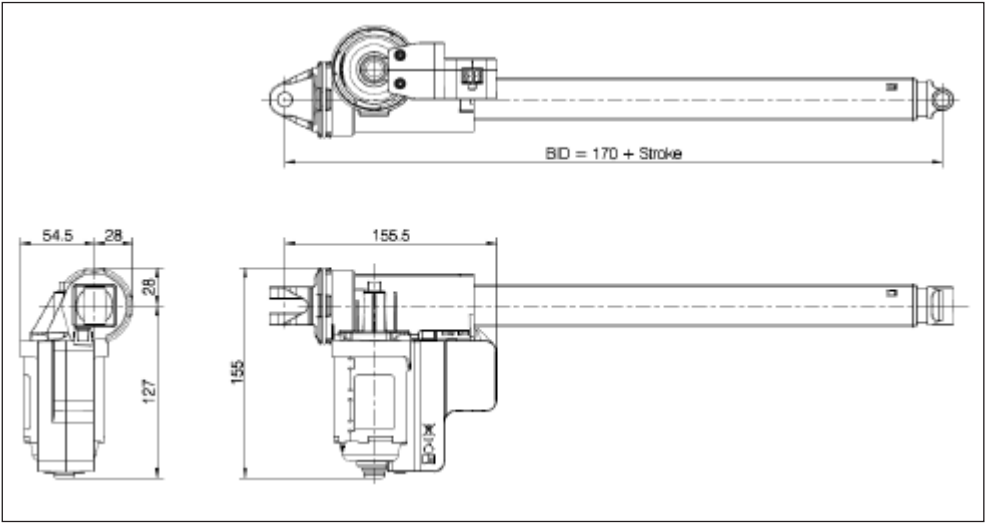 


 
LA18 IC Advanced Master Click-on back fixture

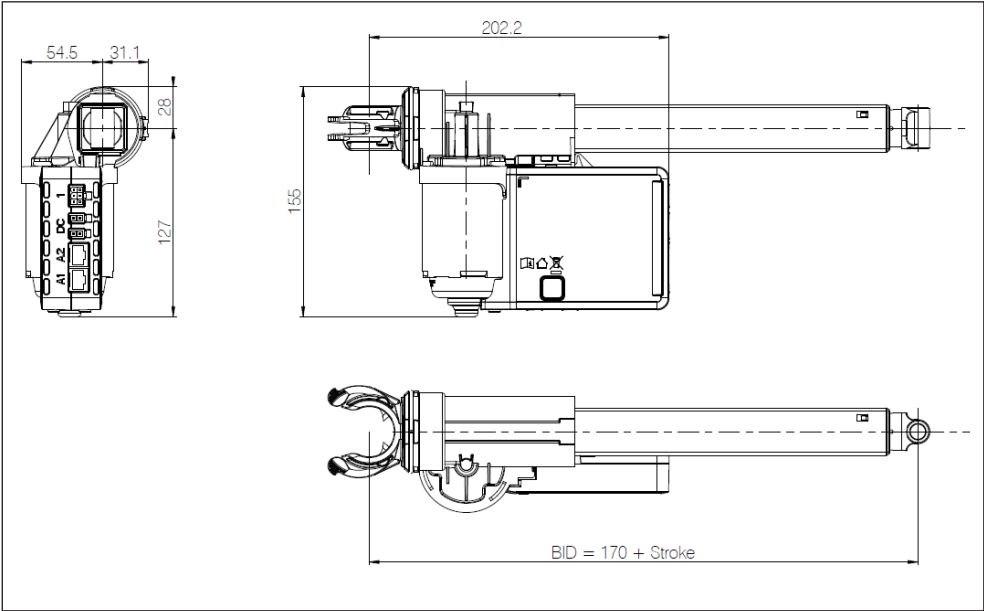


    LA18 IC Advanced Follower Click-on back fixture (B5)

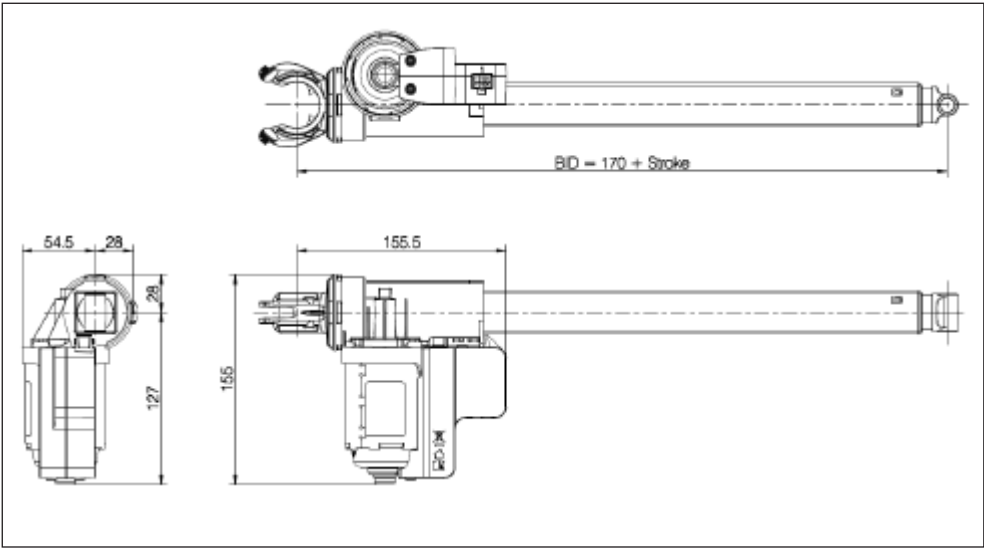




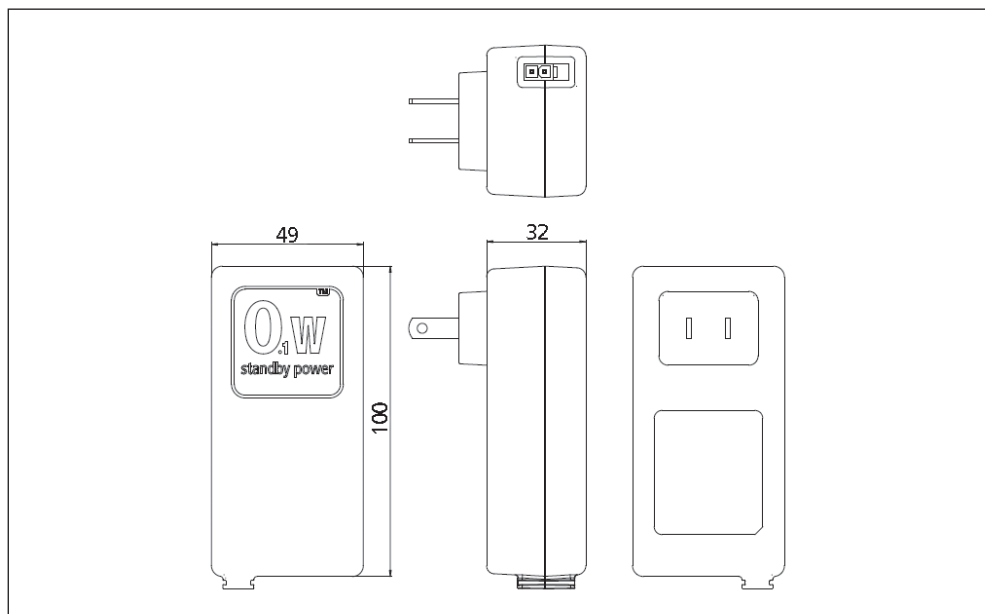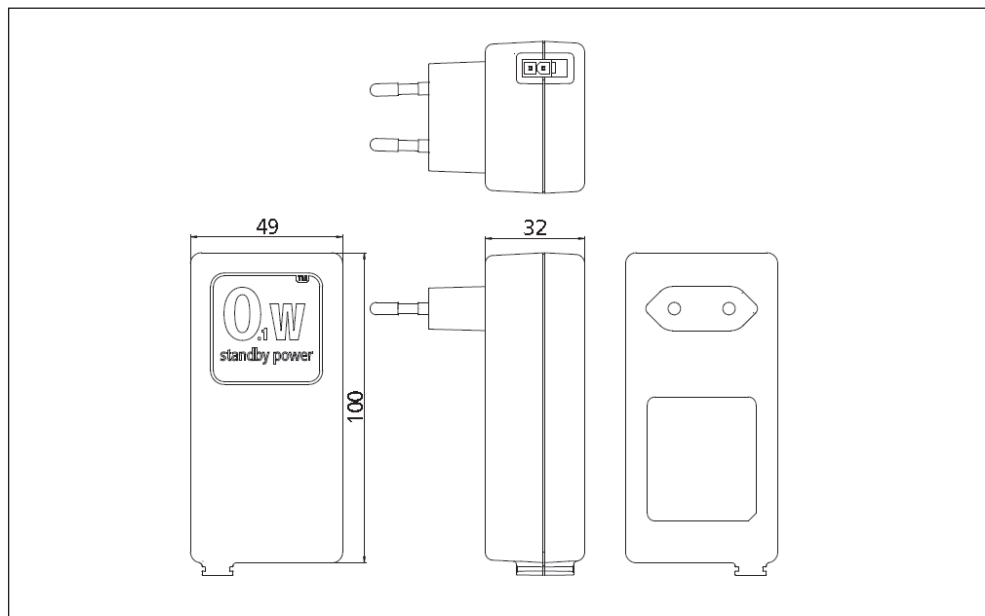


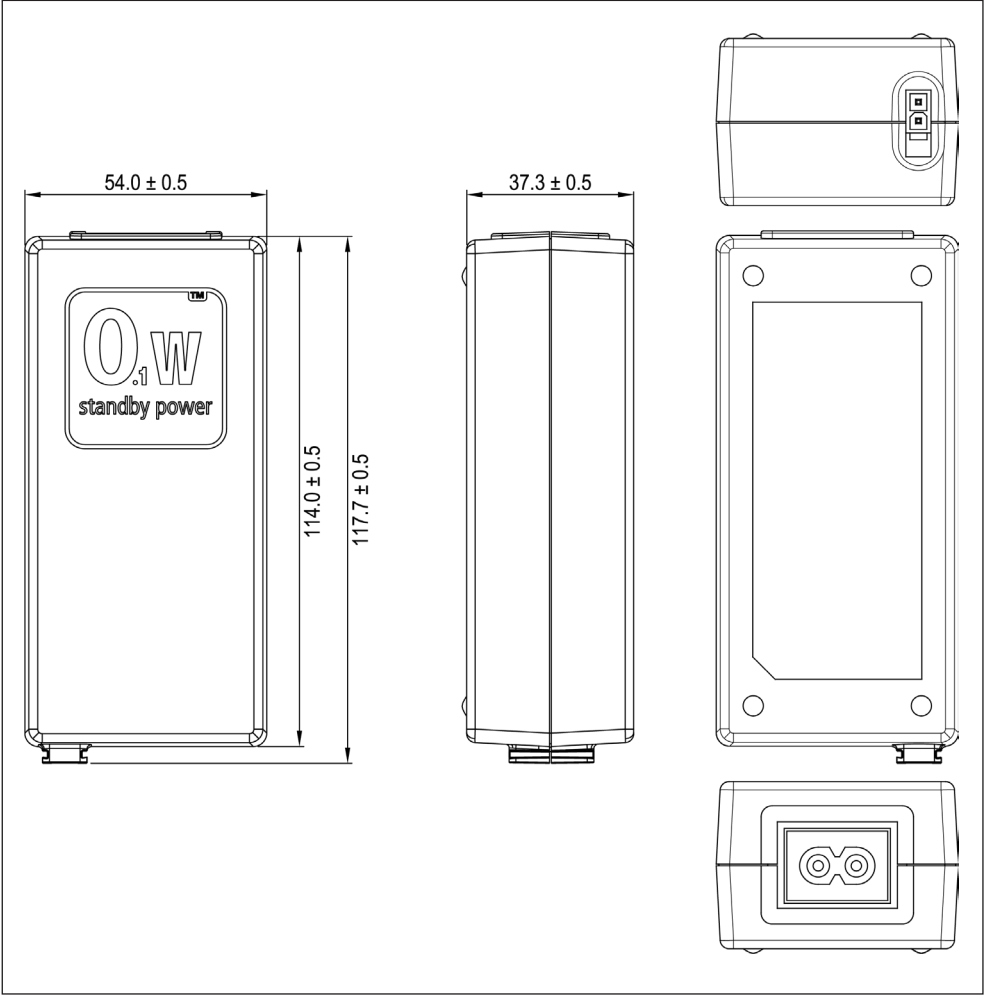


HC20 Wireless

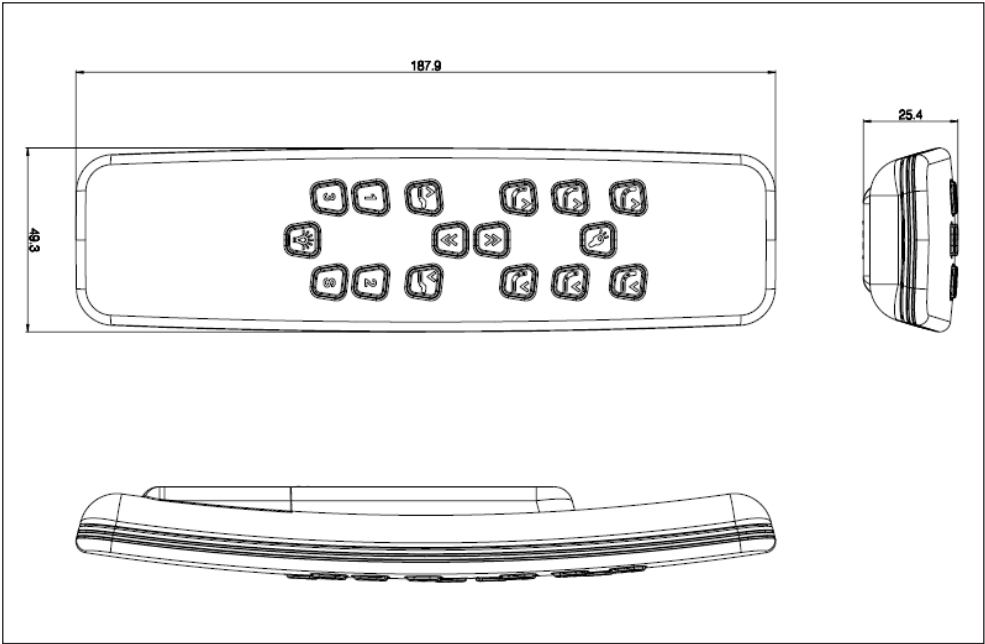 


HC30 Wireless

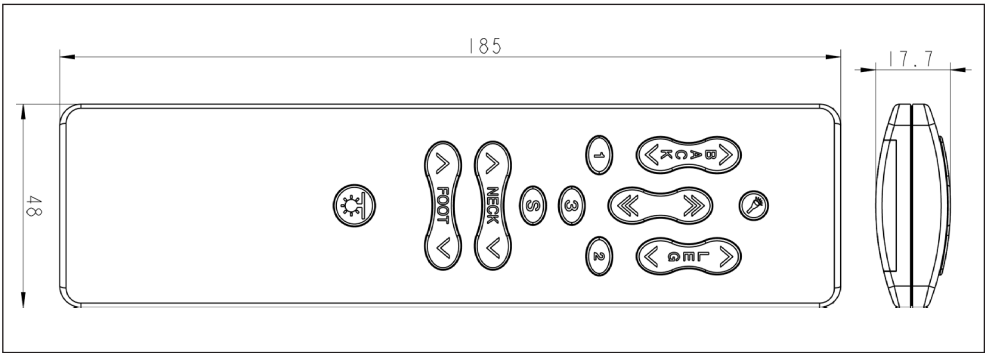 


HC40 FRAME Advanced

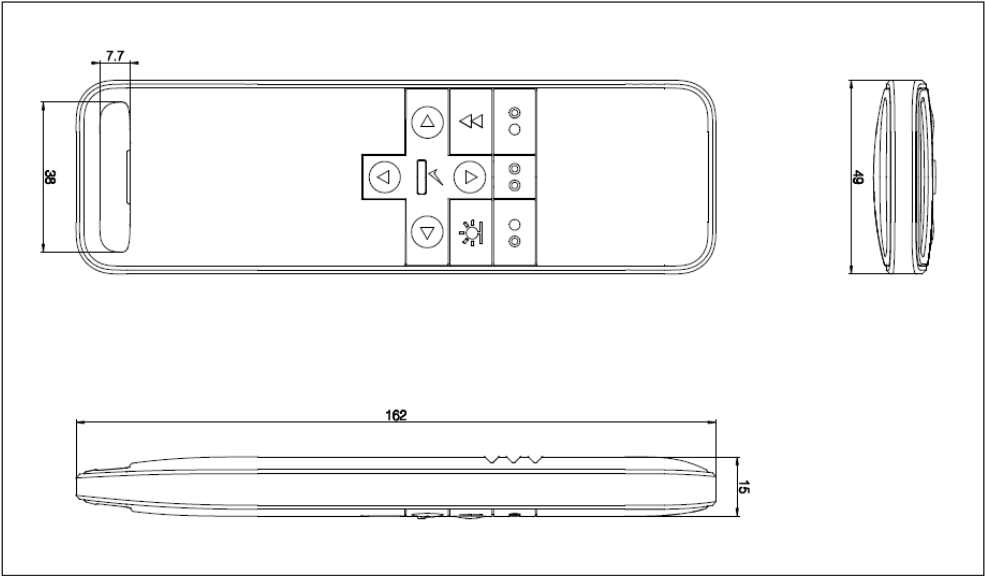 


HC40 TWIST Advanced

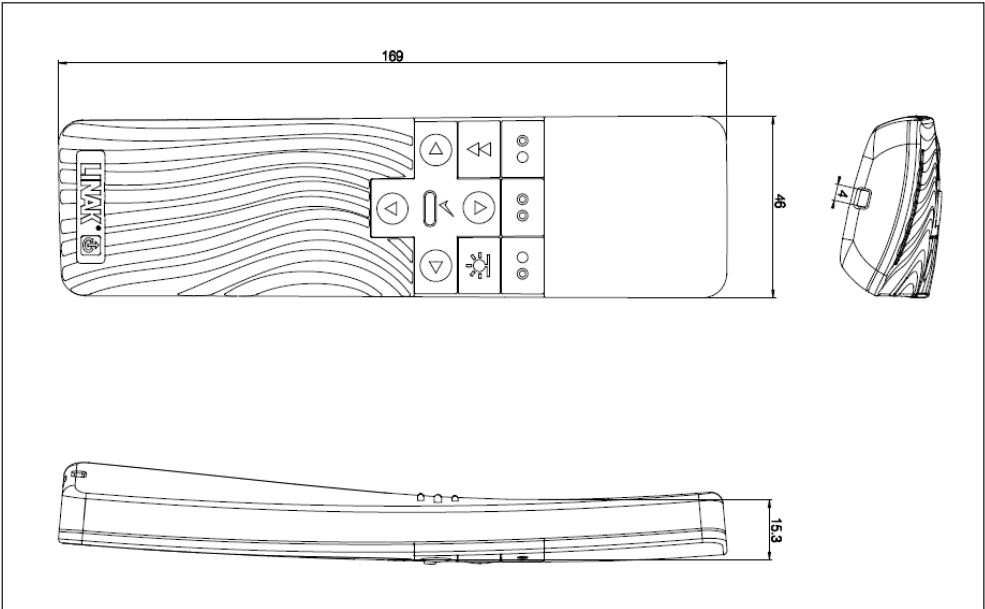 

LEDLIGHTRAIL001

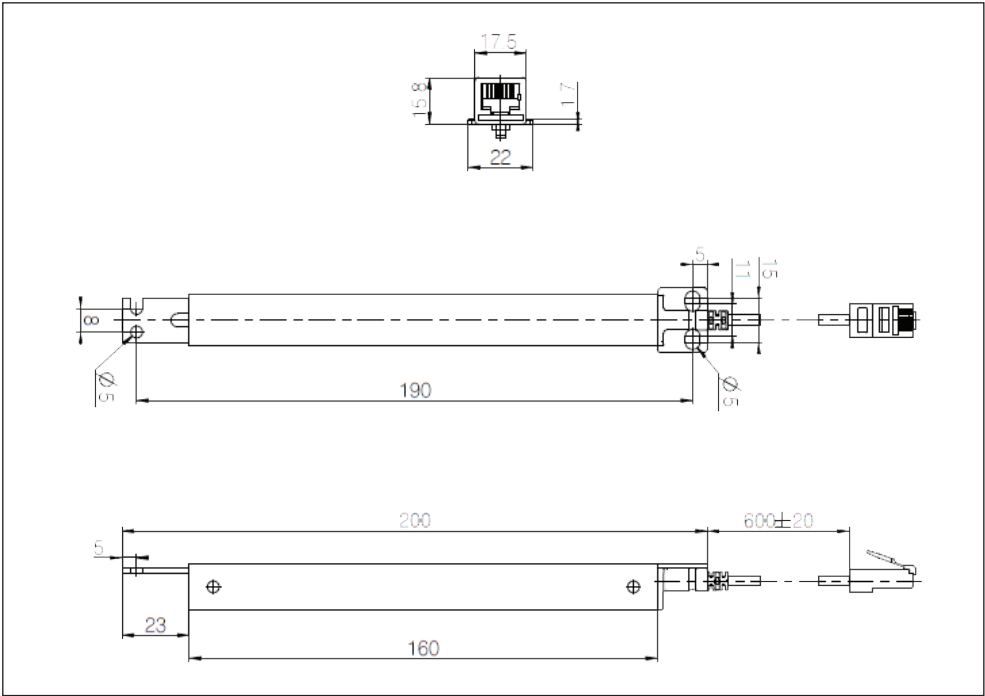 

LEDLIGHTRAIL002

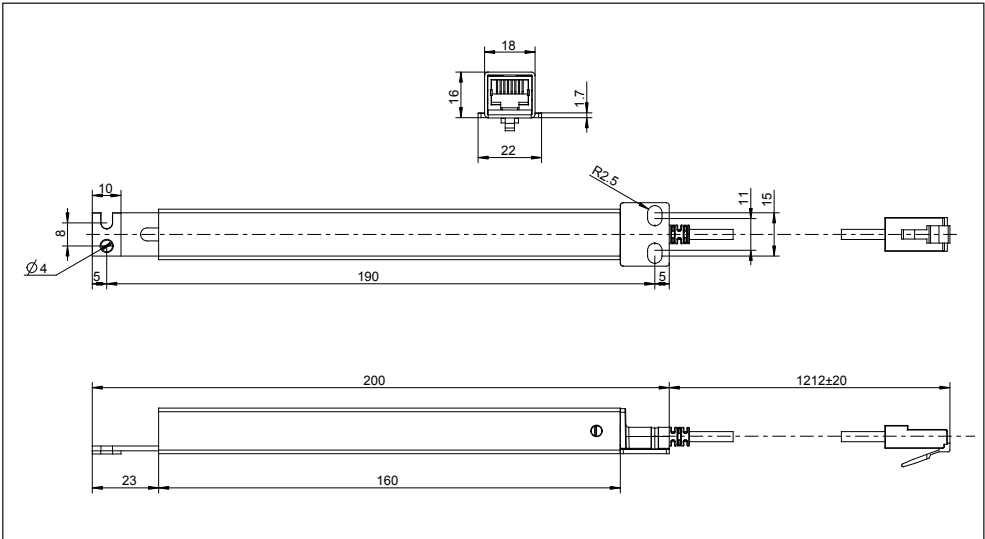 

## **LINAK APPLICATION POLICY**

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or new customer application.

LINAK products as defined above are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that the LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

## FACTORIES

### • Denmark

LINAK A/S  
Group Headquarters  
Tel: +45 73 15 15 15  
Fax: +45 74 45 80 48  
Fax (Sales): +45 73 15 16 13  
[www.linak.com](http://www.linak.com)

### • Denmark

LINAK Profiles  
Tel: +45 73 70 95 30  
[www.linak-profiles.com](http://www.linak-profiles.com)

### • China

LINAK (Shenzhen) Actuator Systems, Ltd.  
Tel: +86 755 8610 6656  
Fax: +86 755 8610 6990  
[www.linak.cn](http://www.linak.cn)

### • Slovakia

LINAK Slovakia s.r.o.  
Tel: +421 51 7563 444  
Fax: +421 51 7563 410  
[www.linak.sk](http://www.linak.sk)

### • Thailand

LINAK APAC Ltd.  
Tel: +66 33 265 400  
[www.linak.com](http://www.linak.com)

### • USA

**LINAK U.S. Inc.**  
Americas Headquarters  
Tel: +1 502 253 5595  
Fax: +1 502 253 5596  
[www.linak-us.com](http://www.linak-us.com)

## SUBSIDIARIES

### • Australia

LINAK Australia Pty. Ltd  
Tel: +61 3 8796 9777  
Fax: +61 3 8796 9778  
[www.linak.com.au](http://www.linak.com.au)

### • Austria

LINAK Repräsentanz  
Österreich (Wien)  
Tel: +43 (1) 890 7446  
Fax: +43 (1) 890 744615  
[www.linak.at](http://www.linak.at) - [www.linak.hu](http://www.linak.hu)

### • Belgium

LINAK Benelux  
(Belgium & Luxembourg)  
Tel: +32 (0)9 230 01 09  
[www.linak.be](http://www.linak.be) - [www.fr.linak.be](http://www.fr.linak.be)

### • Brazil

LINAK Do Brasil Comércio De Atuadores Ltda.  
Tel: +55 (11) 2832 7070  
Fax: +55 (11) 2832 7060  
[www.linak.com.br](http://www.linak.com.br)

### • Canada

LINAK Canada Inc.  
Tel: +1 502 253 5595  
Fax: +1 416 255 7720  
[www.linak-us.com](http://www.linak-us.com)

### • China

LINAK (Shenzhen) Actuator Systems, Ltd.  
Tel: +86 755 8610 6656  
Fax: +86 755 8610 6990  
[www.linak.cn](http://www.linak.cn)

### • Czech Republic

LINAK C&S s.r.o.  
Tel: +42 058 174 1814  
Fax: +42 058 170 2452  
[www.linak.cz](http://www.linak.cz) - [www.linak.sk](http://www.linak.sk)

### • Denmark - Headquarters

LINAK A/S - Group Headquarters  
Tel: +45 73 15 15 15  
Fax: +45 74 45 80 48  
Fax (Sales): +45 73 15 16 13  
[www.linak.com](http://www.linak.com)

### • Denmark - International

LINAK International  
Tel: +45 73 15 15 15  
[www.linak.com](http://www.linak.com)

### • Denmark - Sales

LINAK DANMARK A/S  
Tel: +45 86 80 36 11  
Fax: +45 86 82 90 51  
[www.linak.dk](http://www.linak.dk)

### • Finland

LINAK OY  
Tel: +358 10 841 8700  
[www.linak.fi](http://www.linak.fi)

### • France

LINAK FRANCE E.U.R.L  
Tel: +33 (0) 2 41 36 34 34  
Fax: +33 (0) 2 41 36 35 00  
[www.linak.fr](http://www.linak.fr)

### • Germany

LINAK GmbH  
Tel: +49 6043 9655 0  
Fax: +49 6043 9655 60  
[www.linak.de](http://www.linak.de)

### • India

LINAK A/S India Liaison Office  
Tel: +91 120 4531797  
Fax: +91 120 4786428  
[www.linak.in](http://www.linak.in)

### • Ireland

LINAK UK Limited (Ireland)  
Tel: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
+44 (0)796 855 1606 (UK Mobile)  
+35 387 634 6554 (Republic of Ireland Mobile)  
[www.linak.co.uk](http://www.linak.co.uk)

### • Italy

LINAK ITALIA S.r.l  
Tel: +39 02 48 46 33 66  
Fax: +39 02 48 46 82 52  
[www.linak.it](http://www.linak.it)

### • Japan

LINAK K.K.  
Tel: 81-45-533-0802  
Fax: 81-45-533-0803  
[www.linak.jp](http://www.linak.jp)

### • Malaysia

LINAK Actuators Sdn. Bhd.  
Tel: +60 4 210 6500  
Fax: +60 4 226 8901  
[www.linak.my](http://www.linak.my)

### • Netherlands

LINAK Benelux  
Tel: +31 76 5 42 44 40  
[www.linak.nl](http://www.linak.nl)

### • New Zealand

LINAK New Zealand Ltd  
Tel: +64 9580 2071  
Fax: +64 9580 2072  
[www.linak.com.au](http://www.linak.com.au)

### • Norway

LINAK Norge AS  
Tel: +47 32 82 90 90  
[www.linak.no](http://www.linak.no)

### • Poland

LINAK Polska  
LINAK Danmark A/S (Spółka Akcyjna)  
Tel: +48 22 295 09 70/22 295 09 71  
[www.linak.pl](http://www.linak.pl)

### • Republic of Korea

LINAK Korea Ltd.  
Tel: +82 2 6231 1515  
Fax: +82 2 6231 1516  
[www.linak.kr](http://www.linak.kr)

### • Slovakia

LINAK Slovakia s.r.o.  
Tel: +421 51 7563 444  
[www.linak.sk](http://www.linak.sk)

### • Spain

LINAK Actuadores, S.L.u  
Tel: +34 93 588 27 77  
Fax: +34 93 588 27 85  
[www.linak.es](http://www.linak.es)

### • Sweden

LINAK Scandinavia AB  
Tel: +46 8 732 20 00  
Fax: +46 8 732 20 50  
[www.linak.se](http://www.linak.se)

### • Switzerland

LINAK AG  
Tel: +41 43 388 31 88  
Fax: +41 43 388 31 87  
[www.linak.ch](http://www.linak.ch) - [www.fr.linak.ch](http://www.fr.linak.ch)  
[www.it.linak.ch](http://www.it.linak.ch)

### • Taiwan

LINAK (Shenzhen) Actuator systems Ltd.  
Taiwan Representative office  
Tel: +886 2 27290068  
Fax: +886 2 27290096  
[www.linak.tw](http://www.linak.tw)

### • Thailand

LINAK APAC Ltd.  
Tel: +66 33 265 400

### • Turkey

LINAK İth. İhr. San. ve Tic. A.Ş.  
Tel: +90 312 4726338  
Fax: +90 312 4726635  
[www.linak.com.tr](http://www.linak.com.tr)

### • United Kingdom

LINAK UK Limited  
Tel: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
[www.linak.co.uk](http://www.linak.co.uk)

### • USA

**LINAK U.S. Inc.**  
North and South American Headquarters  
Tel: +1 502 253 5595  
Fax: +1 502 253 5596  
[www.linak-us.com](http://www.linak-us.com)  
[www.linak-latinamerica.com](http://www.linak-latinamerica.com)

## DISTRIBUTORS

### • Argentina

NOVOTEC ARGENTINA SRL  
Tel: 011-4303-8989/8900  
Fax: 011-4032-0184  
[www.novotecargentina.com](http://www.novotecargentina.com)

### • Colombia

MEM Ltda  
Tel: +57 (1) 334-7666  
Fax: +57 (1) 282-1684  
[www.mem.net.co](http://www.mem.net.co)

### • India

Mechatronics Control Equipments India Pvt Ltd  
Tel: +91-44-28558484, 85  
[www.mechatronicscontrol.com](http://www.mechatronicscontrol.com)

### • Indonesia

PT. HIMALAYA EVEREST JAYA  
Tel: +6 221 544 8956/221 549 8965  
Fax: +6 221 619 1925  
Fax (Sales): +6 221 619 4658  
[www.hej.co.id](http://www.hej.co.id)

### • Iraq

Scan Medical Tech  
Tel: +964 770 470 2202

### • Israel

NetivTech LTD  
Tel: +972 55-2266-535  
Fax: +972 2-9900-560  
[www.netivtech.com](http://www.netivtech.com)

### • Kingdom of Bahrain

Mechatronics Industrial Equipments  
Tel: +973 17280059  
Fax: +973 17910045  
[www.mechatronicsbh.com](http://www.mechatronicsbh.com)

### • Qatar

Mechatronics Industrial Equipments  
Tel: +974 44581155  
Fax: +974 44689135  
[www.mechatronicsqatar.com](http://www.mechatronicsqatar.com)

### • Singapore

Servo Dynamics Pte Ltd  
Tel: +65 6844 0288  
Fax (Sales): +65 6844 0070

### • South Africa

Industrial Specialised Applications CC  
Tel: +27 011 466 0346  
[www.isaza.co.za](http://www.isaza.co.za)

### • United Arab Emirates

Mechatronics Industrial Equipments LLC  
Tel: +971 4 267 4311  
Fax: +971 4 267 4312  
[www.mechatronics.ae](http://www.mechatronics.ae)

LINAK® accepts no responsibility for possible errors or inaccuracies in catalogues, brochures, and other material. LINAK reserves the right to change its products without prior notice. LINAK cannot guarantee product availability and reserves the right to discontinue the sale of any product.

The user is responsible for determining the suitability of LINAK products for a specific application. All sales are subject to the 'Standard Terms of Sale and Delivery', available on LINAK websites.

LINAK and the LINAK logotype are registered trademarks of LINAK A/S. All rights reserved.



WE IMPROVE YOUR LIFE