

LC3S0002DK-01
LC3P0004DK-01
LC3P0005DK-01
LC3P0006DK-01

LC3 Column Kit User Manual



This kit user manual does not replace the user manuals of the included products

1. Get your Plug & Play LC3 lifting column kit

You will receive the following parts:

- 1-4 [LC3 lifting column\(s\)](#)
- Black end plates
- Control box(es) [CO71](#) and blind plugs
- Junction box(es) [MJB5](#) and blind plugs
- Operating panel [TP1](#)
- Motor and mains cable



2. Mounting the column(s) and accessories

Column(s)

- The lifting column can be mounted in both directions. Both IPX4 and IPX6 protections are obtained when mounting the largest profile upwards. When mounting the largest profile downwards, IPX4 is obtained.
- The optional end plates offer easy mounting of the column(s) to e.g. worktops and directly on the floor. Start by mounting the bottom plate with the 4 x 45 mm M10 screws and repeat this process for the top plate with the 4 x 35 mm screws. Lastly, mount the column(s) in the application by using the 4 x M10 holes located in the top and bottom plates.



 
If mounting more than one column: Fixate all columns to the worktop. If the application needs to be fixated to a firm foundation/base, only fixate one column to the foundation/base to prevent the columns from bending if they do not move in perfect parallel.

Control box and operating panel

- It is recommended that the control box CO71 is mounted in a position that allows water to escape. Mount the control box using the bracket with M4 nuts (see picture below). Open the lid of the box with a slotted screw driver to mount the cables.
- Mount the operating panel on a surface using the panel mounting bracket (see picture below).


Control box mounting bracket

The bracket has 3 x M4 holes for mounting of the control box



Panel mounting bracket

The operating panel TP1 is mounted with a 45° bracket

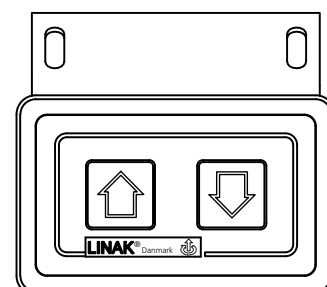


3. Connect the column kit

Depending on how many columns there are in the kit, follow the corresponding guide on the following pages.

Single and 2-Parallel kits

1. Connect the first lifting column using the angled motor cable ❶. Remember to install the locking ring on the female mini-fit connector to keep the cables fastened. Then connect to the control box ❷; channel 2


1.1. If 2 columns: Connect the 2nd column to channel 4 in the control box ❷.
2. Connect the control box ❷ from the center socket to the junction box ❸, port 1. Use the straight cable with modular plugs.
3. Connect the operating panel ❹ to the junction box ❸, port 4.
4. Mount the blind plugs on the open ports of the junction box ❸ and inside the control box ❷. Close the lid tightly on the control box ❷ and close the junction box ❸ by sliding the cable lock into place.
5. Check that the voltage stated on the label on the control box ❷ corresponds to the mains power. Plug in the mains cable ❺ and switch on the power.
6. Press and hold both arrows on the operating panel ❹ until the column(s) is/are fully retracted and stops running. The system is ready.

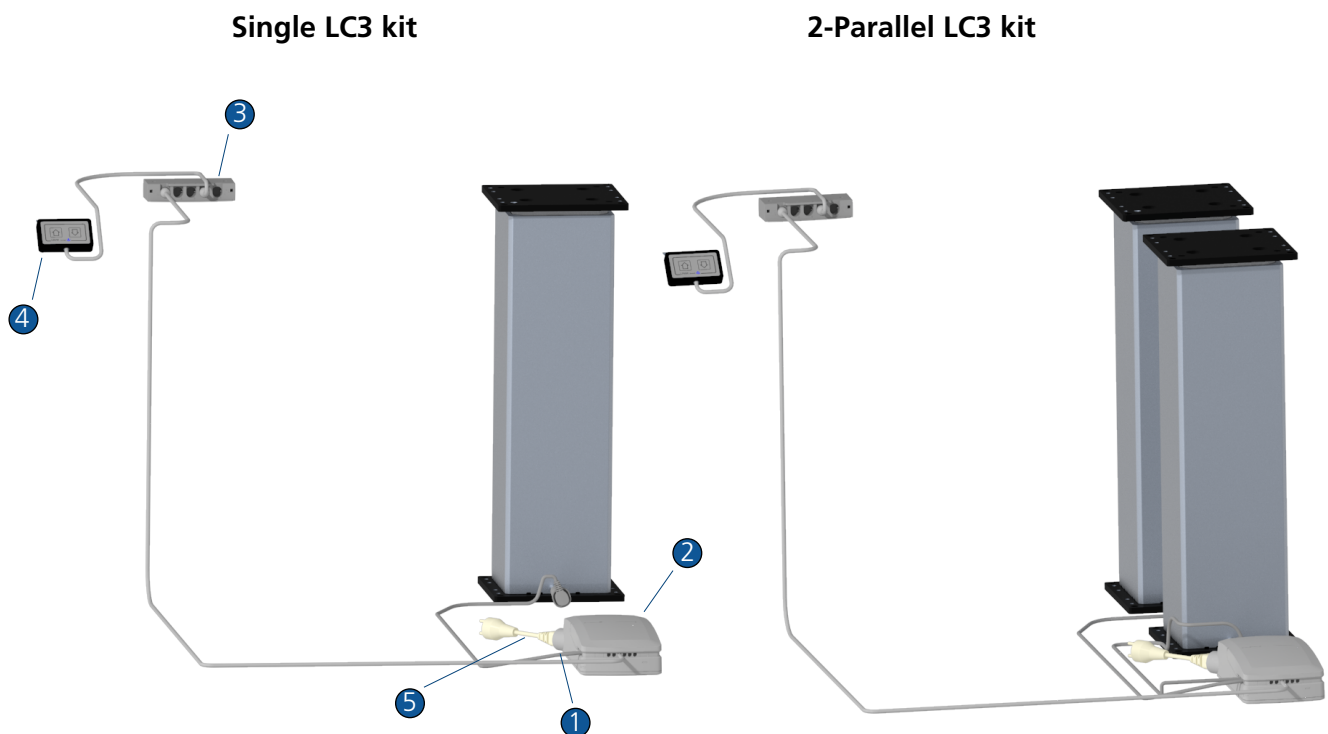


3- and 4-Parallel kits

1. Connect the first lifting column using the angled motor cable ①. Remember to install the locking ring on the female mini-fit connector to keep the cables fastened. Then connect to the control box ②; channel 2.
 - Connect the 2nd column to channel 4 in the same control box
 - Connect the 3rd column to channel 2 in control box 2
 - Connect the 4th column to channel 4 in control box 2
2. Connect the two control boxes ② from the center sockets to the junction box ③ MJB5094001-1323, port 1-2. Use the straight signal cables.
3. Connect the operating panel ④ to the junction box ③ ; port 5. Port 5 is only used for the initialisation process (not shown in the picture below).
4. Check that the voltage stated on the label on the control box ② corresponds to the mains power. Plug in the mains cable ⑤ and switch on the power.
5. Press and hold both arrow buttons on the operating panel ④ until the column(s) is/are fully retracted and stops running. Switch the plug of the operating panel cable from port 5 to port 4.
6. Mount the blind plugs on the open ports of the junction box and inside the control box. Close the lid tightly on the control box and close the junction box by sliding the cable lock into place. The system is ready.

3-Parallel LC3 kit

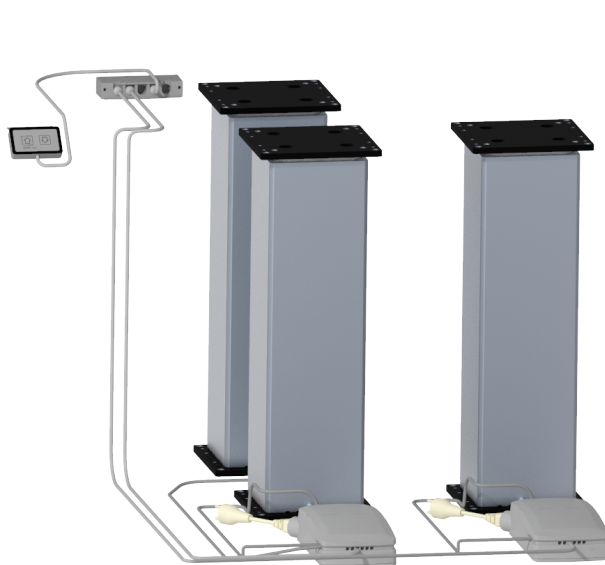

4-Parallel LC3 kit

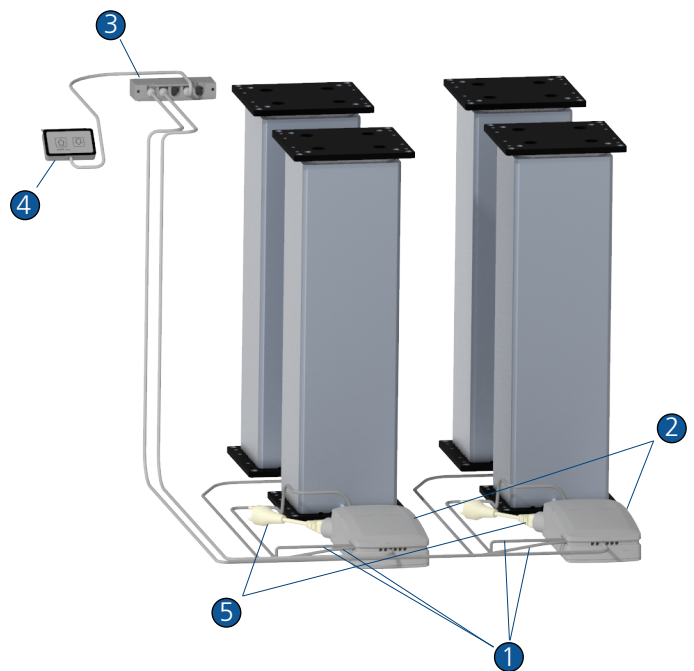

Contacts

FACTORIES

Denmark - Headquarters

LINAK A/S

Phone: +45 73 15 15 15

Fax: +45 74 45 80 48

Fax (Sales): +45 73 15 16 13

Web: www.linak.com

China

LINAK (Shenzhen) Actuator Systems, Ltd.

Phone: +86 755 8610 6656

Phone: +86 755 8610 6990

Web: www.linak.cn

Slovakia

LINAK Slovakia s.r.o.

Phone: +421 51 7563 444

Web: www.linak.sk

Thailand

LINAK APAC Ltd.

Phone: +66 33 265 400

Web: www.linak.com

USA

LINAK U.S. Inc.

Americas Headquarters

Phone: +1 502 253 5595

Fax: +1 502 253 5596

Web: www.linak-us.com
www.linak-latinamerica.com

SUBSIDIARIES

Australia

LINAK Australia Pty. Ltd

Phone: +61 3 8796 9777

Fax: +61 3 8796 9778

E-mail: sales@linak.com.au

Web: www.linak.com.au

Austria

LINAK Zweigniederlassung - Österreich (Wien)

Phone: +43 (1) 890 7446

Fax: +43 (1) 890 744615

E-mail: info@linak.de

Web: www.linak.at - www.linak.hu

Belgium

LINAK Actuator-Systems NV/SA

(Belgium & Luxembourg)

Phone: +32 (0)9 230 01 09

E-mail: beinfo@linak.be

Web: www.linak.be - www.fr.linak.be

Brazil

LINAK Do Brasil Comércio De Atuadores Ltda.

Phone: +55 (11) 2832 7070

Fax: +55 (11) 2832 7060

E-mail: info@linak.com.br

Web: www.linak.com.br

Canada

LINAK Canada Inc.

Phone: +1 502 253 5595

Fax: +1 416 255 7720

E-mail: info@linak.ca

Web: www.linak-us.com

Czech Republic

LINAK C&S s.r.o.

Phone: +42 058 174 1814

Fax: +42 058 170 2452

E-mail: info@linak.cz

Web: www.linak.cz - www.linak.sk

Denmark - International

LINAK International

Phone: +45 73 15 15 15

E-mail: info@linak.com

Web: www.linak.com

Denmark - Sales

LINAK Danmark A/S

Phone: +45 86 80 36 11

Fax: +45 86 82 90 51

E-mail: linak@linak-silkeborg.dk

Web: www.linak.dk

Finland

LINAK OY

Phone: +358 10 841 8700

E-mail: linak@linak.fi

Web: www.linak.fi

France

LINAK France E.U.R.L

Phone: +33 (0) 2 41 36 34 34

Fax: +33 (0) 2 41 36 35 00

E-mail: linak@linak.fr

Web: www.linak.fr

Germany

LINAK GmbH

Phone: +49 6043 9655 0

Fax: +49 6043 9655 60

E-mail: info@linak.de

Web: www.linak.de

India

LINAK A/S India Liaison Office

Phone: +91 120 4531797

Fax: +91 120 4786428

E-mail: info@linak.in

Web: www.linak.in

Ireland

LINAK UK Limited (Ireland)

Phone: +44 (0)121 544 2211

Fax: +44 (0)121 544 2552

+44 (0)796 855 1606 (UK Mobile)

+35 387 634 6554 (Rep.of Ireland Mobile)

E-mail: sales@linak.co.uk

Web: www.linak.co.uk

Italy

LINAK ITALIA S.r.l.

Phone: +39 02 48 46 33 66

Fax: +39 02 48 46 82 52

E-mail: info@linak.it

Web: www.linak.it

Japan

LINAK K.K.

Phone: 81-45-533-0802

Fax: 81-45-533-0803

E-mail: linak@linak.jp

Web: www.linak.jp

Malaysia

LINAK Actuators Sdn. Bhd.

Phone: +60 4 210 6500

Fax: +60 4 226 8901

E-mail: info@linak-asia.com

Web: www.linak.my

Netherlands

LINAK Actuator-Systems B.V.

Phone: +31 76 5 42 44 40 /

+31 76 200 11 10

E-mail: info@linak.nl

Web: www.linak.nl

New Zealand

LINAK New Zealand Ltd

Phone: +64 9580 2071

Fax: +64 9580 2072

E-mail: nzsales@linak.com.au

Web: www.linak.com.au

Norway

LINAK Norge AS

Phone: +47 32 82 90 90

E-mail: info@linak.no

Web: www.linak.no

Poland

LINAK Polska

LINAK Danmark A/S (Spółka Akcyjna)

Phone: +48 22 295 09 70 /

+48 22 295 09 71

E-mail: info@linak.pl

Web: www.linak.pl

Republic of Korea

LINAK Korea Ltd.

Phone: +82 2 6231 1515

Fax: +82 2 6231 1516

E-mail: info@linak.kr

Web: www.linak.kr

Slovakia

LINAK Slovakia S.R.O.

Phone: +421 51 7563 444

Web: www.linak.sk

Spain

LINAK Actuadores, S.L.u

Phone: +34 93 588 27 77

Fax: +34 93 588 27 85

E-mail: esma@linak.es

Web: www.linak.es

Sweden

LINAK Scandinavia AB

Phone: +46 8 732 20 00

Fax: +46 8 732 20 50

E-mail: info@linak.se

Web: www.linak.se

Switzerland

LINAK AG

Phone: +41 43 388 31 88

Fax: +41 43 388 31 87

E-mail: info@linak.ch

Web: www.linak.ch - www.fr.linak.ch
www.it.linak.ch

Taiwan

LINAK (Shenzhen) Actuator systems Ltd.

Taiwan Representative office

Phone: +886 2 272 90068

Fax: +886 2 272 90096

E-mail: sales@linak.com.tw

Web: www.linak.com.tw

Turkey

LINAK İth. İhr. San. ve Tic. A.Ş.

Phone: +90 312 4726338

Fax: +90 312 4726635

E-mail: info@linak.com.tr

Web: www.linak.com.tr

United Kingdom

LINAK UK Limited

Phone: +44 (0)121 544 2211

Fax: +44 (0)121 544 2552

E-mail: sales@linak.co.uk

Web: www.linak.co.uk

DISTRIBUTORS

Argentina

Novotec Argentina SRL

Phone: 011-4303-8989 / 8900

Fax: 011-4032-0184

E-mail: info@novotecargentina.com

Web: www.novotecargentina.com

Colombia

MEM Ltda

Phone: +[57] (1) 334-7666

Fax: +[57] (1) 282-1684

E-mail: servicioalcliente@memltda.com.co

Web: www.mem.net.co

India

Mechatronics Control Equipments India Pvt Ltd

Phone: +91-44-28558484, 85

E-mail: bala@mechatronicscontrol.com

Web: www.mechatronicscontrol.com

Indonesia

PT. Himalaya Everest Jaya

Phone: +6 221 544 8956 /+6 221 544 8965

Fax: +6 221 619 1925

Fax (Sales): +6 221 619 4658

E-mail: hejplastic-div@centrin.net.id

Web: www.hej.co.id

Israel

NetivTech LTD

Phone: +972 55-2266-535

Fax: +972 2-9900-560

Email: info@NetivTech.com

Web: www.netivtech.com

Singapore

Servo Dynamics Pte Ltd

Phone: +65 6844 0288

Fax: +65 6844 0070

E-mail: servodynamics@servo.com.sg

South Africa

Industrial Specialised Applications CC

Phone: +27 011 466 0346

E-mail: gartht@isagroup.co.za

Web: www.isaza.co.za

United Arab Emirates

Mechatronics

Phone: +971 4 267 4311

Fax: +971 4 267 4312

E-mail: mechtron@emirates.net.ae

Terms of use

LINAK® takes great care in providing accurate and up-to-date information on its products. However, the user is responsible for determining the suitability of LINAK products for a specific application. Due to continual development, LINAK products are subject to frequent modifications and changes. LINAK reserves the rights to conduct modifications, updates, and changes without any prior notice. For the same reason, LINAK cannot guarantee the correctness and actual status of imprinted information on its products.

LINAK uses its best efforts to fulfil orders. However, for the reasons mentioned above, LINAK cannot guarantee availability of any particular product at any given time. LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or in other written material created and produced by LINAK, LINAK subsidiaries, or LINAK affiliates. All sales are subject to the 'Standard Terms of Sale and Delivery for LINAK A/S' available on LINAK websites. LINAK and the LINAK logotype are registered trademarks of LINAK A/S. All rights reserved.



WE IMPROVE YOUR LIFE